
### 3.1.2 Quick function buttons (continued)



Left ◀ and right ▶ navigation buttons

- In AUTO mode: Allows modifying the cartridge intensity ( ◀ = less, ▶ =more) at any time.
- In programming mode: Allows navigating to the left ◀ or to the right in the menus.

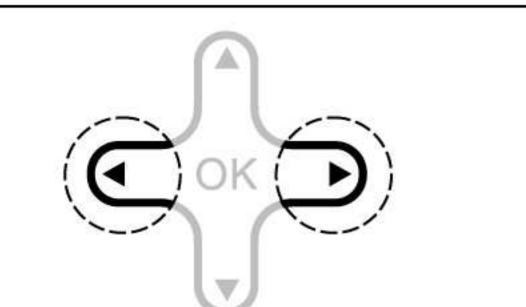

OK (Enter) button

ENTER button to move from one programming stage to the next, or to switch to AUTO mode after having selected the cartridge(s).



« Back » button

- In AUTO mode: Pause, or continuation of the program if paused.
- In programming mode: This button takes you back to the previous step in case of error.



Program button

This button lets you access the programming modes of the diffuser's various time slots

### 3.1.3 - Cartridges selection

The various icons below show the catridge(s) selected in AUTO mode or to be



Cartridge **A** selected



Cartridge **B** selected



Cartridges  $\bf A$  and  $\bf B$  selected : Allows a higher fragrance intensity by operating the diffuser's two cartridges simultaneously.



Cartridges **A** and **B** selected in **alternating diffusion** mode: This increases the diffuser's autonomy (up to 2 times, if the cartridges are full), using alternately by « cycle » cartridges A and B for the duration of the programmed time slot.



In direct use mode: Display a rotating movement during diffusion, disappears after discontinuation of the diffusion.


### 3.1.4 - Details on the « Power » and « Time Cycle » functions

Your OLFACTORY SPIRIT® Pro diffuser combines two functions that allow you to better control the volume of the space to be fragranced (Power), but also the concentration of odor molecules (odor intensity) in this space. It is the ratio between these two values that you will let you custom-control the desired olfactive impact.

**Power:** This setting lets you manage the volume / size problem of the space to be fragranced.

There are 6 levels of turbine power (1 to 6), level 1 being the lowest (very small volume: e.g. an office of 8 m2) and 6 the highest (e.g. a large open space of over 40 m2).

The power can be modified at any given moment while in direct use mode, by using the up ▲ and down ▼ buttons:

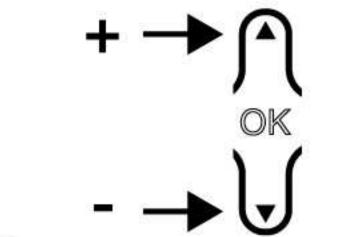

Intensity: This setting is critical in that it can control the concentration of fragrance molecules even during a programmed time slot in operation.

« TIME CYCLE » or « INTENSITY » is the period during which the diffusion of the cartridges alternates between the ON mode (diffusion) and the OFF mode (diffusion stopped). The intensity increases the more the diffusion time in ON mode is important in relation to the time in OFF mode.

### 3.1.4 - (continued)

There are 5 intensity levels; level 5 being the recommended setting when using a movement detector (optional) or to create a significant fragrance intensity but for shorter periods.

### : Presentation of the different intensity levels TIME CYCLE ON: 45 s - OFF: 180 s > Or a total cycle of: 225 s •• ON: 45 s - OFF: 90 s > Or a total cycle of: 135 s ON: 100 s - OFF: 100 s > Or a total cycle of: 200 s ON: 180 s - OFF: 60 s > Or a total cycle of: 240 s ON: 60 s - OFF: 20 s > Or a total cycle of: 80 s

The intensity can be modified at any given moment while in direct use mode, by using the left ◀ and right ▶ buttons:

### Test

If you must test your diffuser in small spaces, it is necessary to change the intensity and power of the diffuser, which are initially set for ventilated areas of over 60 M2 (see below).

- > Set the intensity (cycle time) on level 1 or 2 (vs 4 by default). The intensity corresponds to the olfactory yield regardless of the volume covered.
- > Turn the power on level 1 or 2 (vs 5 by default). The power corresponds to the area to be covered (as of 1 = 8/10 M2 à 6 = 50 M2 and over).

# 3.2 - First time use

### 3.2.1 - Time setting

This setting lets you adjust the time of your diffuser. Procedure:

Press the program button




■ Press the right button four (4) times until the time display appears and press **OK**.



Press OK to save the time setting.

## 3.2.2 - AUTO mode (automatic)


The AUTO mode is a quick programming setting for continuous diffusion. You can select one or the other cartridge, or both for either simultaneous (AB) or alternating (A/B) operation, and also the intensity and power level of the diffusion.

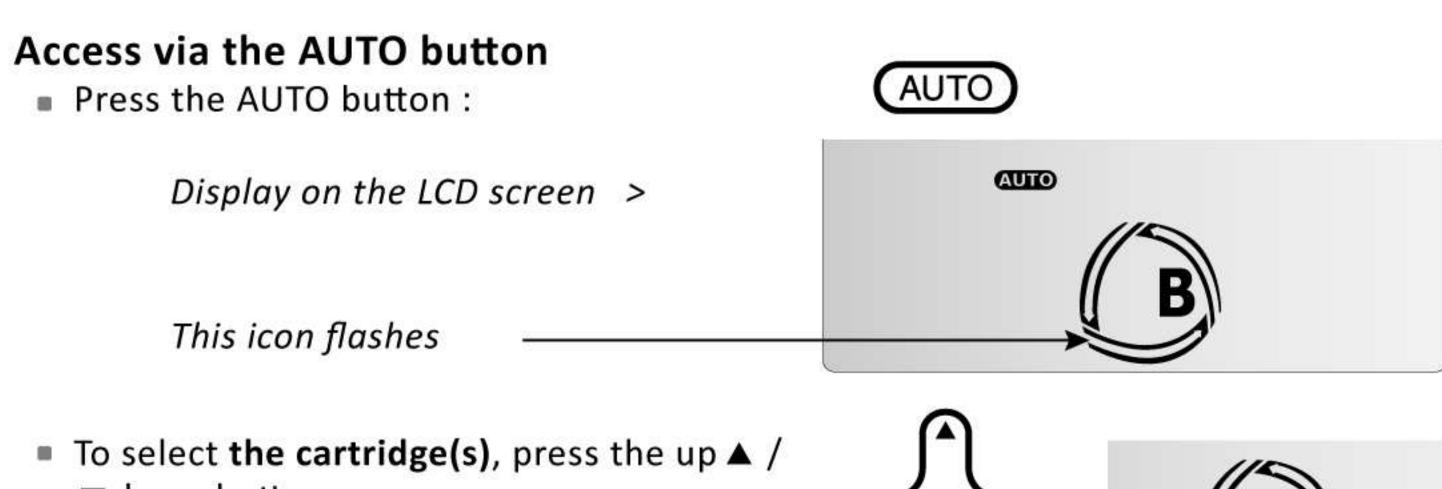

▼ down buttons.

To accept, press OK.



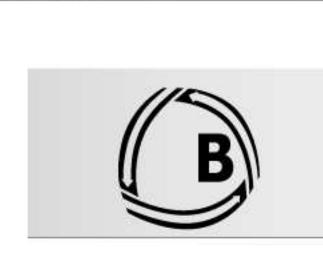

The diffusion starts at once.


NB: In AUTO mode, 1 / the diffuser automatically stops at 23:59h. It can also be immediately switched off by pressing the AUTO button again.

2 / When the diffuser is equipped with a movement detector, it is automatically


### 3.2.3 - Programmes d'usine

There are 4 pre-defined factory programs (slots) (P1), (P2), (P3), (P4).

The four slots P1, P2, P3, and P4 are pre-programmed as follows:

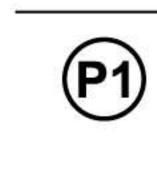


Start 9:15 - End 18:45 Selected cartridge : A TIME CYCLE: Turbine power level: 5 Days scheduled: MON TUE WED THU FRI SAT PIR (Optional movement detector) : OFF



Selected cartridge: AIB (Alternating cartridge diffusion) TIME CYCLE: ||| Turbine power level: 5 Days scheduled: MON TUE WED THU FRI SAT PIR (Optional movement detector): OFF

### 3.2.3 - (continued)



Stard 9:15 - End 12:30 Selected cartridge : A TIME CYCLE : •••• Turbine power level : 5 Days scheduled: MON TUE WED THU FRI SAT PIR (Optional movement detector): OFF

Start 14:15 - End 18:45 Selected cartridge: B TIME CYCLE : •••• Turbine power level: 5 Days scheduled: MON TUE WED THU FRI SAT PIR (Optional movement detector): OFF

## 3.2.4 - Custom programs


To set your own programming slots according to your needs, simply follow this procedure (8 stages):

1/ Press the program button



2/ Choose the slot to be programmed

Use the left ◀ / right ▶ buttons to select the slot(s) to be changed (they appear in sequence). Press **OK** to accept.

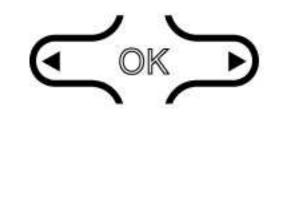


P3 is selected.

**P3** 

3/ Activate the selected slot

Press the up ▲ / down ▼ buttons to either activate (ON) or to disable (OFF) the selected slots. (The slot to be programmed must be set to ON). Press **OK** to accept.

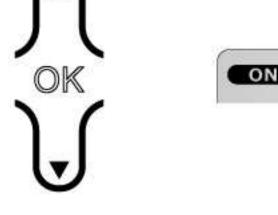

ON P3 is set to ON.

Monday and Sunday

STARD STARD

AIB

Alternating diffusion

OWEGAGED.

are inactive

END

Start time 9:30


End time 18:15


NB: 1/ If two slots overlap, priority is given to the slot with the earlier Start Time. 2/ When a slot is disabled (OFF mode), its programming is saved until its reactivation.

### 4/ Selection of the diffusion days

Use the up ▲ /down ▼ buttons to select the day(s) of your choice.

To activate or disable any days of the week, press the left ◀ /right ▶ buttons Press **OK** to accept.

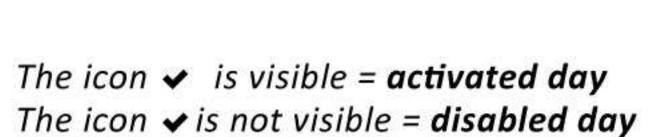



Use the up ▲ / down ▼ buttons to make changes : 1/ start time « START » 2/ end time « END » of the diffusion\* (\*by 15 minutes blocks). Press **OK** to accept.

### 6/ Cartridge choice in association mode (when two identical cartridges are selected). Use the up ▲ / down ▼ buttons to select


the cartridge(s). Press **OK** to accept.

# 7/ Intensity choice

(molecule concentration in the air). Use the up ▲ / down ▼ buttons to change the intensity (TIME CYCLE). Press **OK** to accept.

### 8/ Power level choice

(olfactive yield). Use the up ▲ / down ▼ buttons to change the turbine power. Press **OK** to accept.

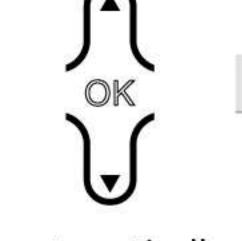

123456 Power level 6

((O))

Detector activated

Intensity level 5

By pressing **OK**, your programmed slot has been saved automatically.

This procedure equally applies to programming slots P1, P2, P3, and P4.

# 9/ OPTIONAL: Movement detection ON or OFF

Use the up ▲ / down ▼ buttons to activate or to disable the movement detector. Press **OK** to accept.

Intensity level 5 is particularly suitable for this feature.

# Signature Olfactive®

7 -13 Bld Paul Émile Victor - Bât B - 92200 Neuilly-sur-Seine - France Tel. + 33(0)176212525

Signature Olfactive S.A.S. Capital of 348 270 €

# OLFACTIVE SPIRIT® Pro



Instructions for use OLFACTIVE SPIRIT® Pro V 1.5



# Congratulation!

Thank you for purchasing an OLFACTIVE SPIRIT®Pro diffuser. It has been manufactured with utmost care in order to meet your demands in terms of performance, simplicity and efficiency. To get the most out of all the sophisticated features your diffuser has to offer, we recommend that you read these instructions thoroughly.

### Contents

### 1 - Get to know your device

- 1.1 Precautions for use
- 1.2 Placement of the device
- 1.3 General description of the Olfactive Spirit® Pro System

### 2 - Before usage

- 2.1 Preparing and inserting the fragrance cartridges
- 2.2 Powering the device
- 2.3 Checking the fragrance cartridges
- 2.4 The autonomy of the cartridges 2.5 - Disabling/activating the option « Sound signal »
- 3 Getting started

### 3.1 - Introduction to the functions

- 3.1.1 Presentation of the symbols on the LCD screen
  - 3.1.2 Quick function buttons 3.1.3 - Cartridge selection
  - 3.1.4 Details on the «Power» and «Time Cycle» functions

### 3.2 - First time use

- 3.2.1 Time setting
- 3.2.2 Automatic «Auto» mode
- 3.2.3 Factory pre-settings
- 3.2.4 Custom programs



### 1 - Get to know your device

### 1.1 - Precautions for use

### It is essential that you observe the following instructions.

- The device connects to a 220V mains outlet, only using the power cord with 12V adapter, supplied with the diffuser.
- The diffuser is to be placed in a dry environment and is for indoor use
- Keep your diffuser within reasonable operating temperatures (between 8° and 32° C) and avoid exposure to heat or direct sunlight (inside a car in hot weather, for example)
- Do not open the diffuser's housing or attempt any repairs by yourself. If you need any services, please contact Signature Olfactive for further instructions.
- Only cartridges manufactured and supplied by Signature Olfactive can be used in the Olfactive Spirit® Pro diffusers. Signature Olfactive declines any responsibility for damages caused by wrongful use of the diffuser, or by using non-approved cartridges.
- Do not use the Olfactive Spirit ® Pro fragrances cartridges for any other purpose than described in these instructions. Signature Olfactive waives any responsibility for damage of any kind derived from opening cartridges, in particular, where the release of the polymer pellets from the opened cartridge(s) has caused damage to the device's turbines. In case of ingestion of- or eye contact with the polymer pellets, seek medical attention immediately.
- Keep the diffuser out of reach of children, in particular. For practical reasons place the device in a non-accessible manner for customers, visitors, patients, etc.

Non-compliance with the precautions for use may lead to the immediate cancellation of the product's warranty.

# 1.2 - Placement of the device

The diffuser can either be placed on the floor, shelf, wall or linear display, depending on the selected setting options, or specific requirements.

To maximize fragrance performance and to minimize unauthorized handling of the device by your clients, visitors or patients, it is recommended to place or fix your diffuser at a minimum height of 180 cm from the floor in an area preferably out of sight from the public.

N.B. Do not place the device near a CMV system (Controlled Mechanical Ventilation) as this will negatively impact fragrance performance.

Conversely, the presence of an Air Conditioning system may boost your diffuser's olfactive yield substantially.

# 1.3 - General description of the OLFACTIVE SPIRIT® Pro system

The OLFACTIVE SPIRIT® Pro System consists of an electronic diffuser and two fragrance cartridges.

Thanks to its molecular diffusion technology, there is no dispersion of liquid particles in the ambient air whatsoever and as a consequence there is no passive pollution, residue, inhibition or nausea.

With its two fragrance cartridges in place, OLFACTIVE SPIRIT® Pro lets you change ambiance in a snap, according to your desires. The time required varies according to the aerolic conditions, the volume and the ventilation of the area in which the device is placed.


The diffuser controls with great precision the pressure and olfactive intensity of the airflow, supercharged with fragrance molecules by the OLFACTIVE SPIRIT® Pro cartridges.

The OLFACTIVE SPIRIT® Pro cartridges are sold either by authorized dealers and/or distributors, or directly by Signature Olfactive S.A.S.


### 2 - Before Use

### 2.1 - Preparing and inserting the fragrance cartridges

- Unpacking the diffuser
- Unpacking the cartridges

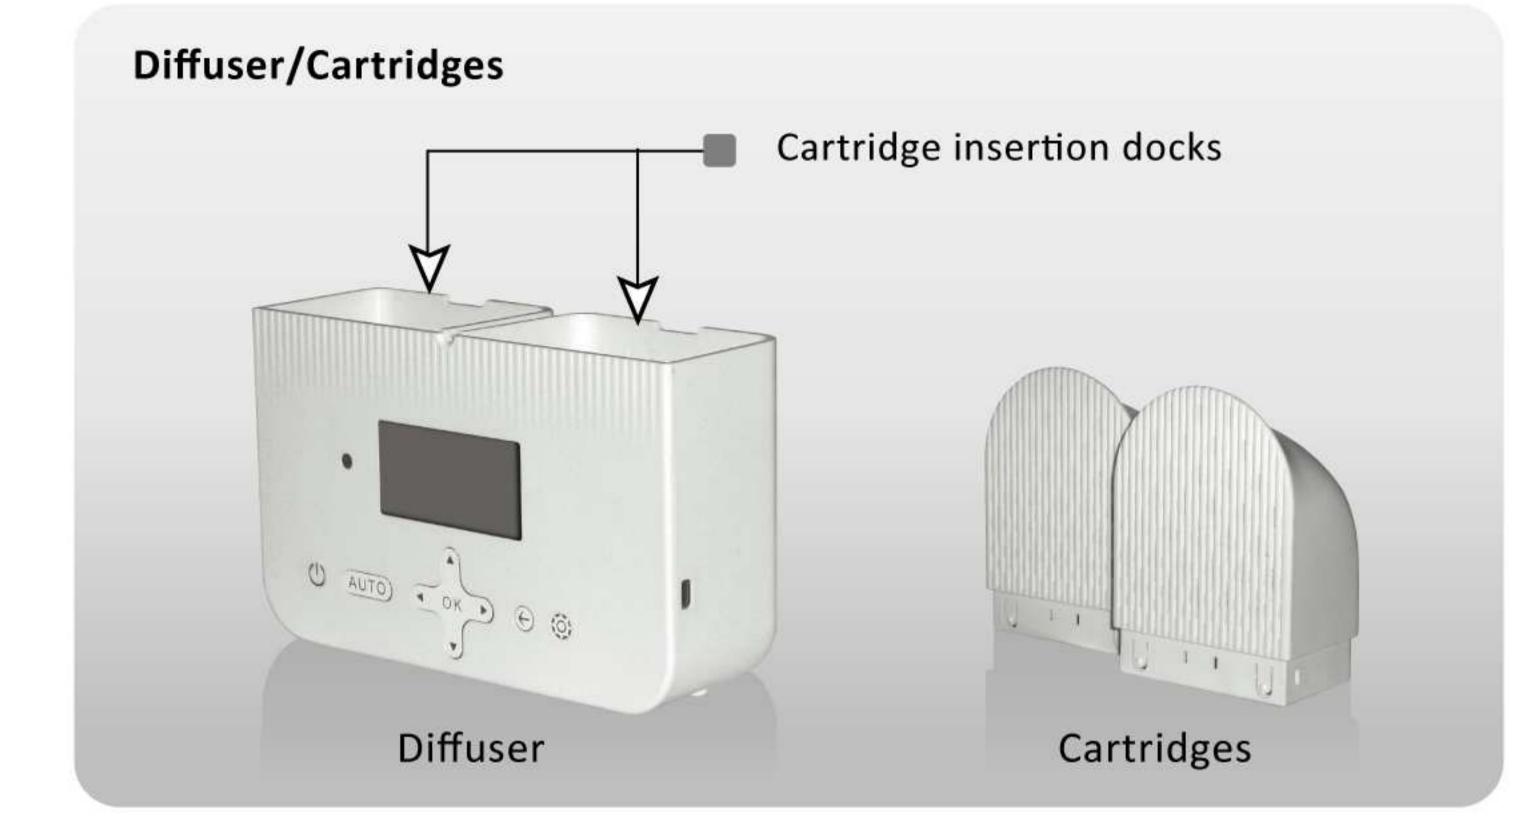


Insert the 2 cartridges into the docks at the top of the diffuser by exercising a slight pressure on the clip at the rear of the cartridges.

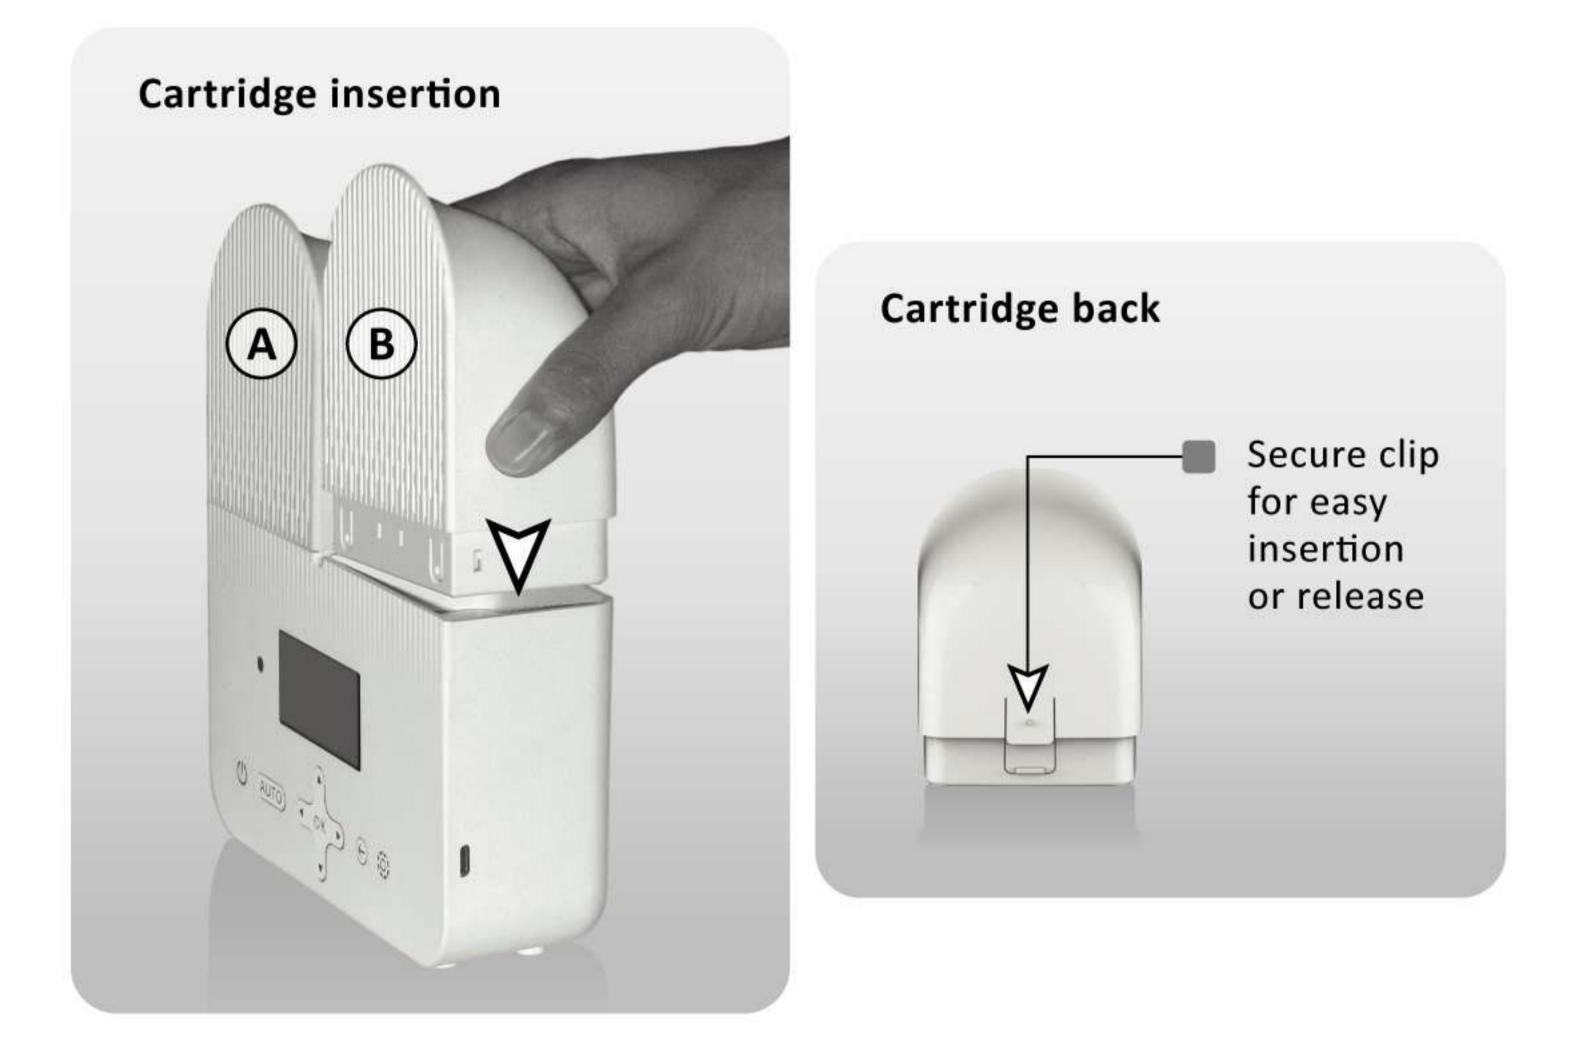


### 2.2 - Powering the device (220V)

- Plug the power cord into the socket below the base of the device using the brackets to guide the cord from underneath the base
- Plug the other end of the power cord into an electrical outlet

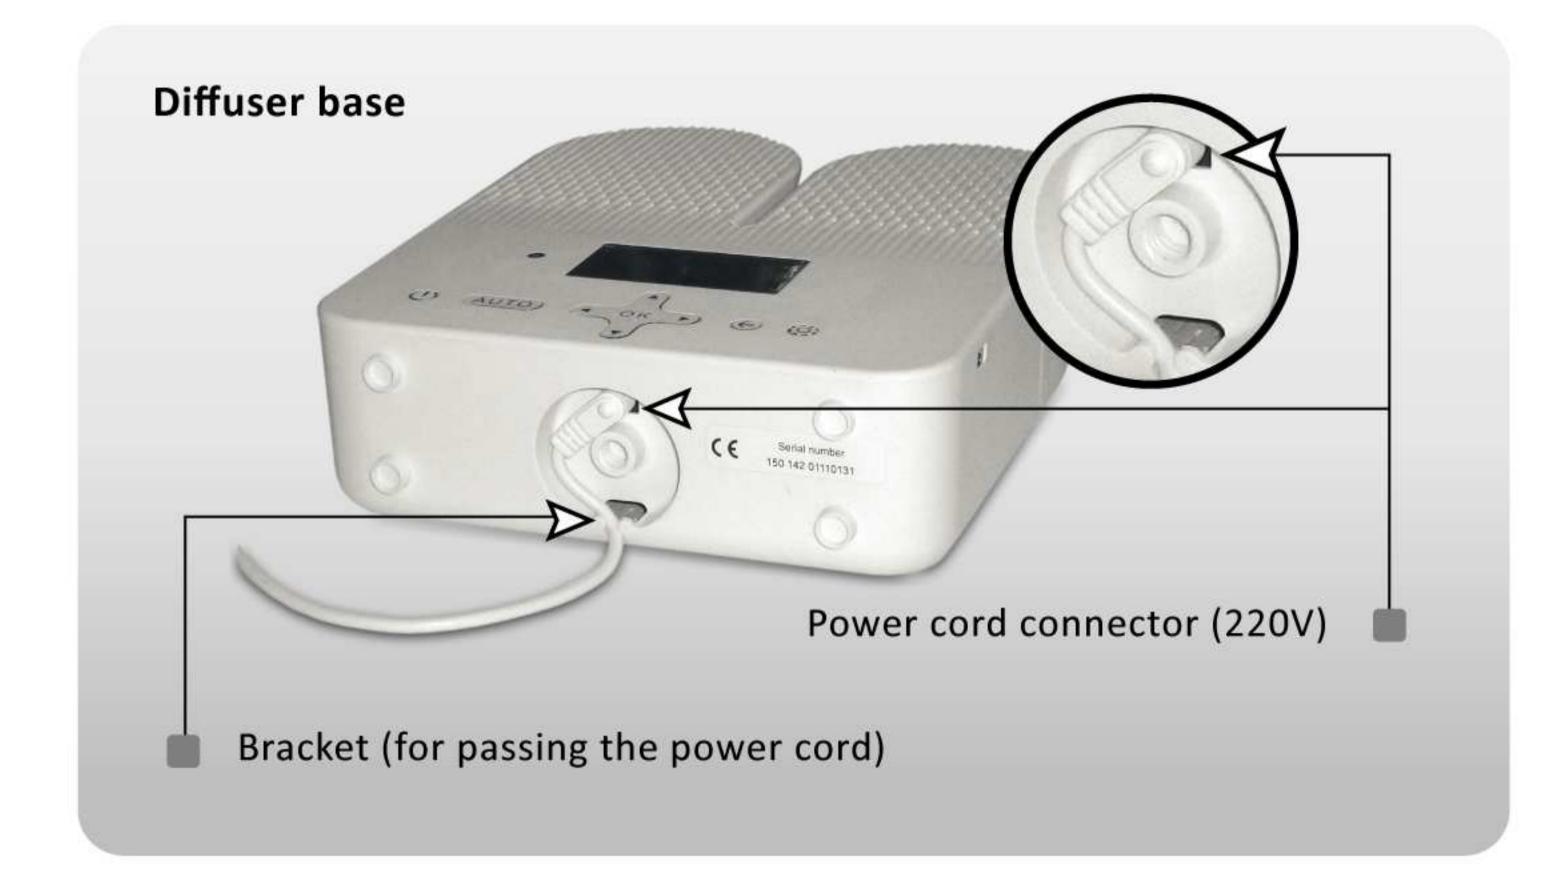


After the initial startup procedure and activation of the LED buttons, the diffuser will boot up automatically.

> Example of what you may see on the screen >

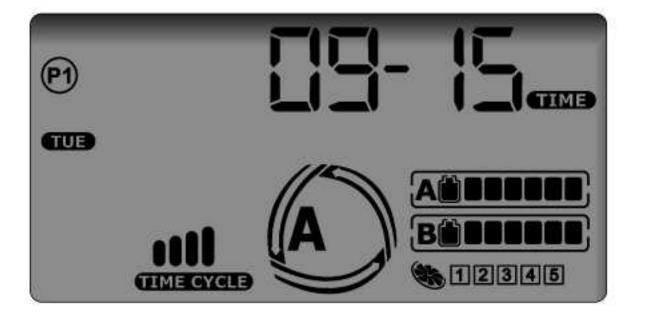

### 2 - Before use (continued)

- ▶ If the diffuser is to be tested in smaller areas (>20m²), please refer to point 3.1.4 Functions "power" and "intensity" (Time Cycle).
- If your diffuser's time and/or date need adjustment, please refer to point 3.2.1 Time adjustment.
- « Standby » mode
- Your diffuser's control panel locks automatically after a period of 30 seconds after the last key has been pressed, to avoid tampering.
- To exit the « stand by » mode, press « OK » twice with an interval of two seconds.
- The control panel is active again when all LEDs are lit.

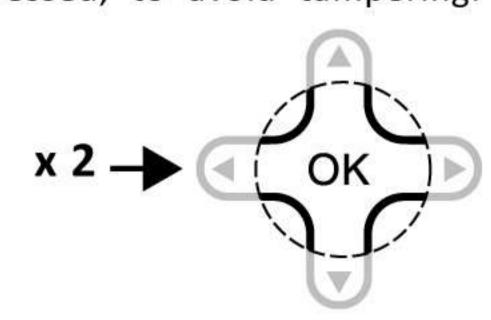


### 2.3 - The autonomy of the cartridges

Through its electronic identification system, the diffuser measures in real time the remaining autonomy of your cartridge(s), even if used in several different Olfactive Spirit® Pro diffusers.

### Life indicator

There are 7 black control bars, each representing 1/7th (abt. 15%) of the cartridge life, indicated on the packaging of the cartridges.

The cartridge is recognized as "full" when all 7 bars are displayed.

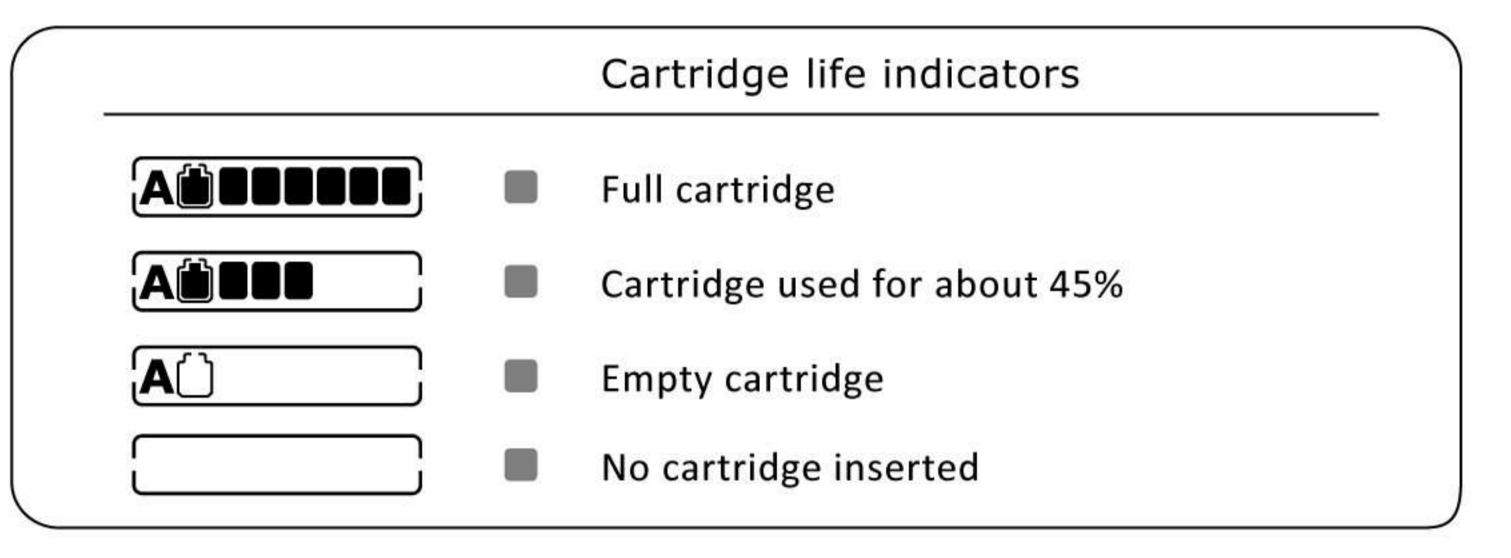

### Empty cartridge


Once the cartridge is empty, the symbol « U » (empty cartridge) appears on the LCD screen. The latter will start flashing and an alarm sound will be activated during 2 minutes every day at 10:45 am. Replacement of the cartridge will make the device stop the flashing and the

alarm will be deactivated. Storage

The fragrance cartridges for Olfactive Spirit ® Pro diffusers are guaranteed for a shelf life of about 2 years in their unopened original protective packaging.

### 2.4 - Checking the fragrance cartridges

If the 2 cartridges are correctly in place, the symbole appears on the LCD screen. >



In case of problems:

 $\checkmark$  If the «  $\angle$ !\ > symbol appears, it means that a cartridge is not correctly in place (cartridge not recognized)



To correct this problem, repeat the insertion process.


✓ If the LCD screen is continuously flashing, it means that the cartridges are empty and should be replaced.

### 2.5 - Disabling/activating/ the option « Sound Signal >

Your diffuser's « Alarm signal » function is activated by default.

- To disable the « Alarm signal » function
- Please disconnect and reconnect the diffuser for **5** seconds this time by pressing the **down** arrow ▼



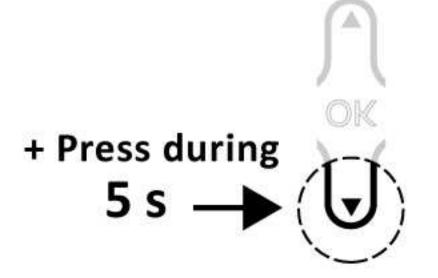


until you hear a «beep» followed by a second «beep».

### 2.5 - Disabling/activating/ the option « Alarm signal » (continued)

To reactivate the « Alarm Signal » function

> Please **perform** the same operation but this time with the up arrow A

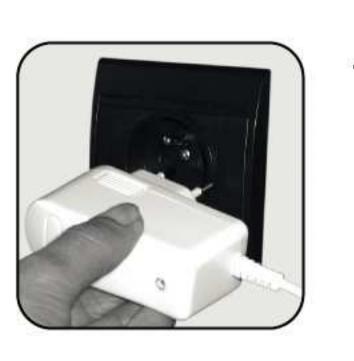

: Level of

cartridge

autonomy

Turbine power

(from 1 « minimum »

to 6 « maximum »),

adjustable at any moment

while in direct use mode

until you hear a «beep» followed by a second «beep».

To see if the "Alarm signal" is enabled, just listen when connecting the diffuser; if you hear a «beep», the "Alarm" is active. Otherwise, it is not.

# 3 - Getting started

ON


PAUSE


MON

**AUTO** 

# 3.1 - Introduction to the functions

### 3.1.1 Presentation of the symbols on the LCD screen

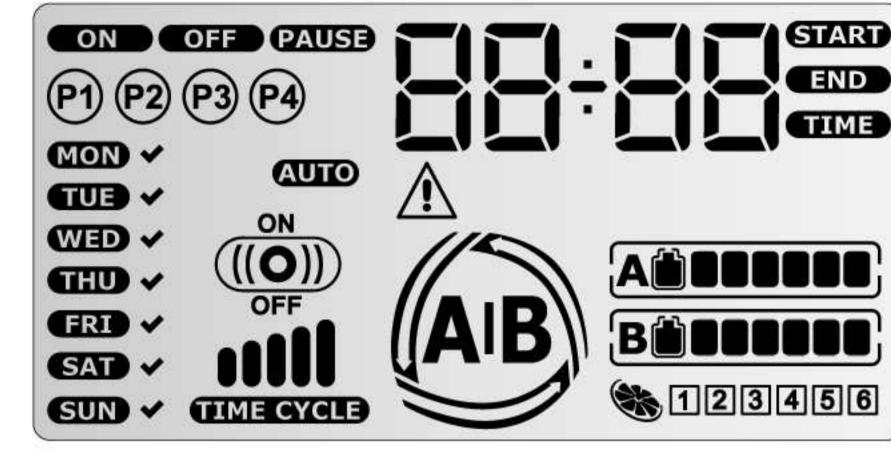

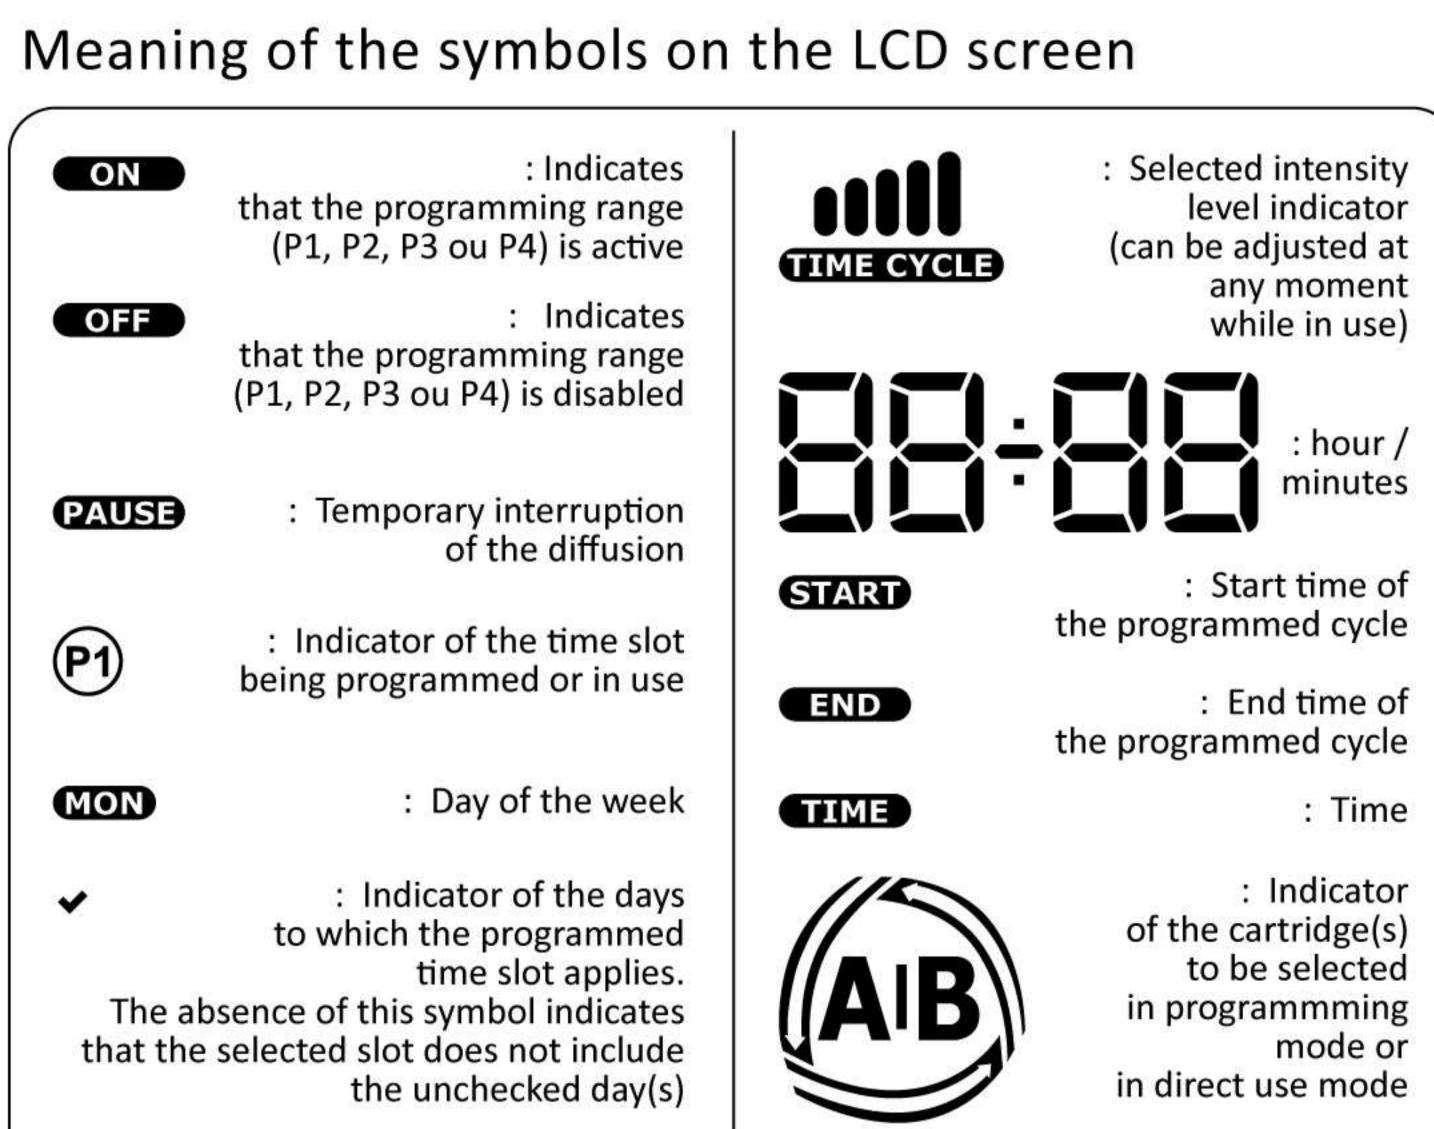

ABCCCC

# 3.1.2 Quick function buttons

Automatic mode activated


: Cartridge insertion

movement detector

problem indicator

ON and OFF

(OPTIONAL)

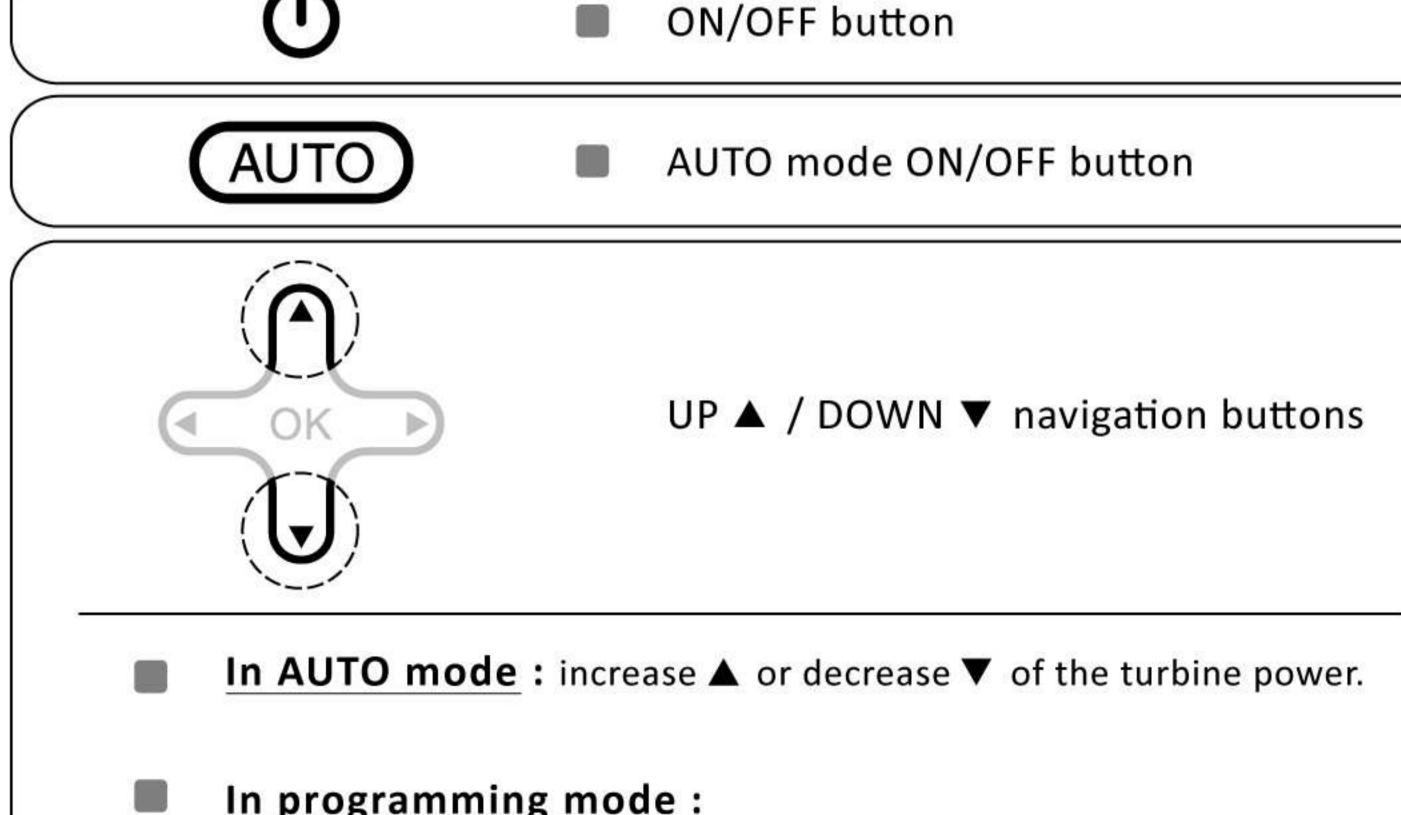

In programming mode: The **up arrow \( \Lambda \)** increases the value to be selected.

The **down arrow** ▼ decreases the value to be selected.

or

These buttons let you select the cartridge(s) to be programmed.