

Technical documentation

Scent Refill Cartridge « OLFACTIVE SPIRIT® Pro »

Customs code : 330749

■ Traceability

Scent refill cartridge real time electronic consumption indicator

■ Ergonomy


Easy grip - Compact size
No contact with fragranced polymer

■ Performance

Up to 190h operating / charging autonomy
Long-term storage in its original bag

■ Clip system

Secured attachment -
Quick and effortless vertical insertion and extraction

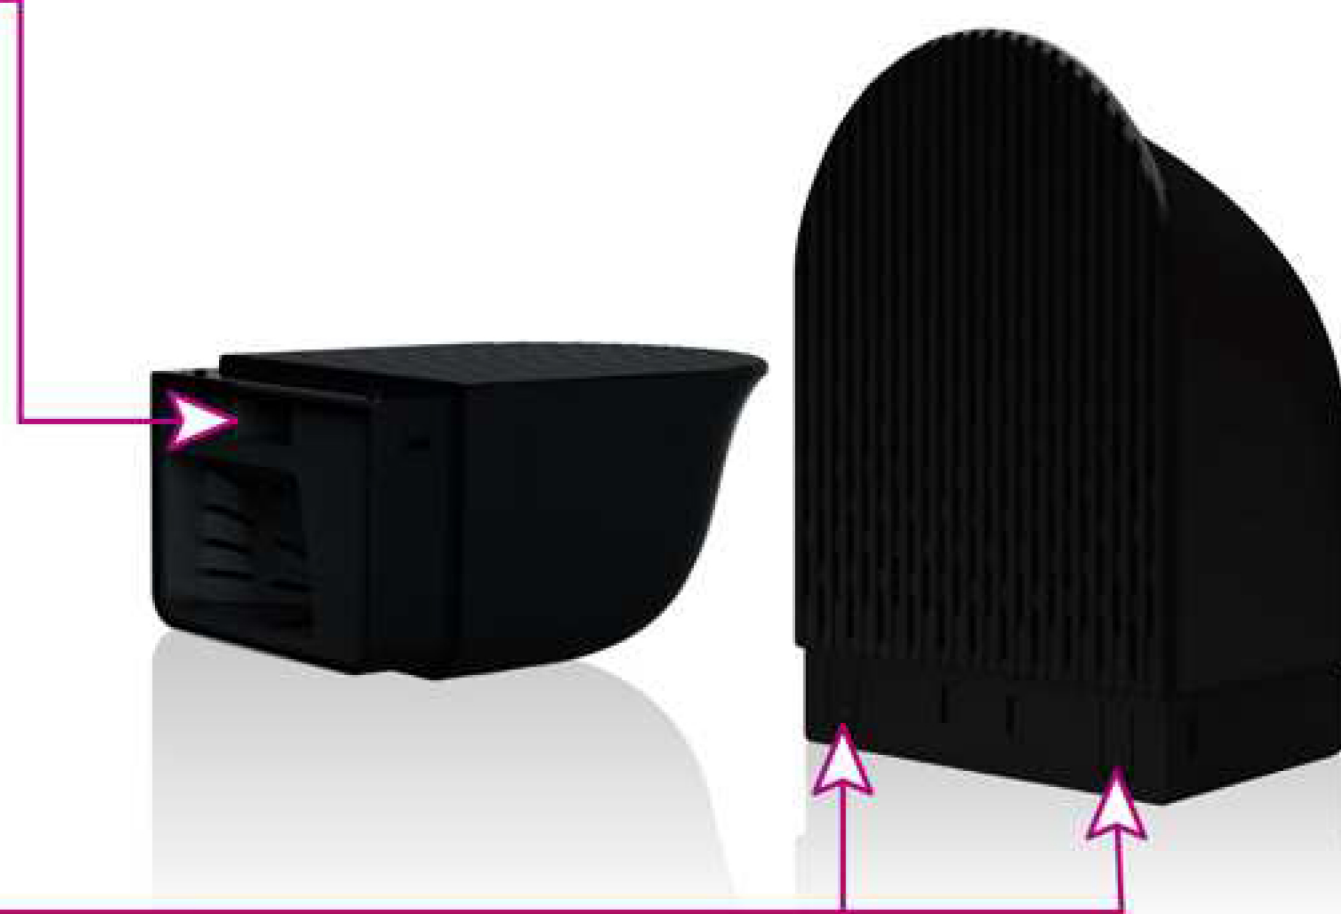

General description

- Scent refill cartridge designed exclusively for the professional OLFACTIVE SPIRIT® Pro diffuser containing polymer balls impregnated with synthetic fragrances
- Dry diffusion technology : Fragrance diffusion with the diffuser's turbine generated pressurized air flowing through the polymer balls contained in the refill cartridges
- No liquid dispersion in the atmosphere (*no micro droplets nor steam, etc.*), no scent evidence or persistence when stopping the diffuser
- Simplicity : No skin contact with the fragrance - Rapid scent refill cartridge insertion or extraction thanks to the diffuser in vertical alcoves also strengthened through integrated attachment clips
- Instant electronic scent refill cartridge detection and consumption indicator (*autonomy*)
- Exclusive protected industrial design
- Comply with OLFACTIVE SPIRIT® Pro diffuser's manual

Technical information

- Resistant plastic housing (*up to 2 mm*), with "soft touch"
- Available in black or white color
- Scent refill Cartridge detection and real time autonomy calculation through electronic chip
- Various fragrances available : refer to the individual scent information and safety datasheet (*IFRA Standards*)
- Substrate / vector : 3-5mm ELVAX polymer granules
- Battery life : up to 190 hours operation / charging according to scent reference by reference
- Audible and visual alarm once scent refill cartridge is empty
- Dimensions : Width :- 8.5cm - Depth * 5.7 * 12.0cm - Height
Net weight : **240g**
- Conservation :
 - 15 months in its original sealed bag in a dry place at room temperature
 - 2 months after opening the bag or first use with the diffuser